



## PREPARING THE TREATMENT


### 1 Job selection

From the Spraying Menu, press key and hold to select spraying job.



### 2 Reset total counters

From the Spraying Menu, press key and hold to select spraying job.

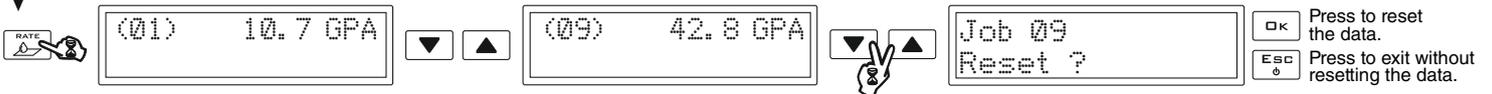



### 3 Tank Filling

From the Spraying Menu, press to select the value to be set.





## USE

### 1 Automatic treatment control

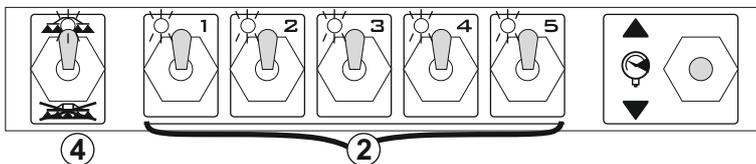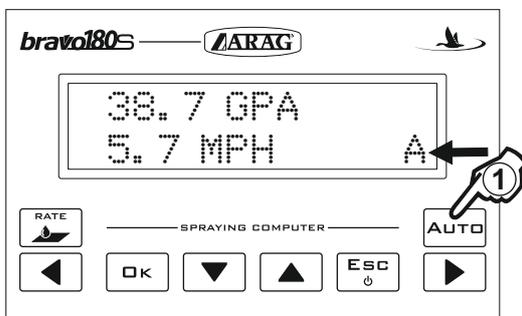


- ① Press to enable automatic mode
- ② Turn ON/OFF the section valves required
- ③ Drive to the start of the field
- ④ Set the main control switch up
- ⑤ Run the treatment

### 2 Temporary variation in rate

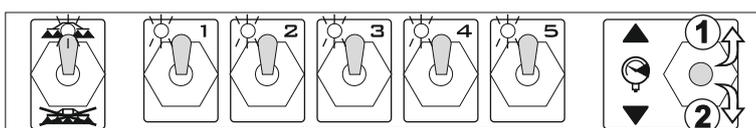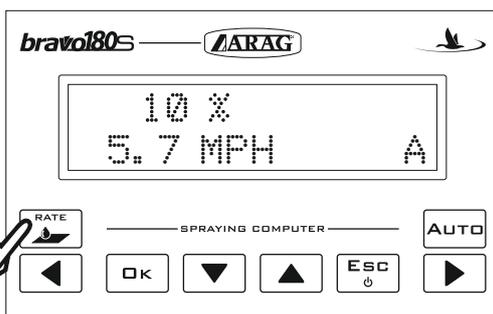


- ① Press the switch up to increase the delivery value
- ② Press the switch down to decrease the delivery value
- ③ Press to reset the rate variation percentage

## KEY TO ITEMS ON DISPLAY

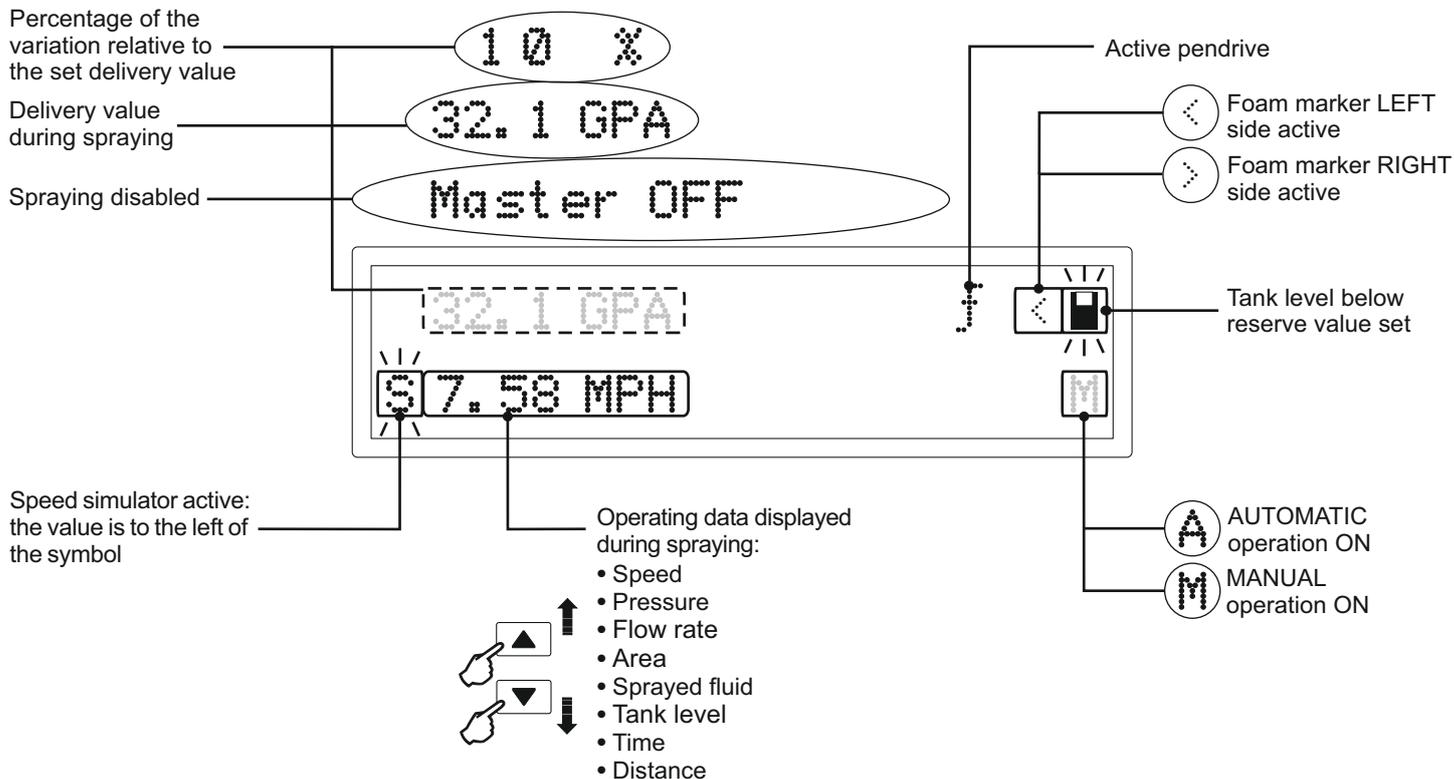


## OPERATING ALARMS

- The computer is not receiving the speed of the tractor and spraying is enabled (main control switch "ON"). The messages shown flash alternating.

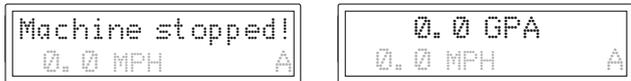

- The computer detects zero flowrate and spraying is active (main control switch "ON"). The messages shown flash alternating.

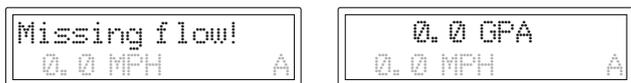

- Speed too high or low for the set dosage.



## SELECTING THE WHEEL TYPE (CONSTANT)

From the Spraying Menu, hold down to access the User Menu.

